



Your Global Automation Partner

# PSU67-1P-1M-2M4-24150-IOL-F Smart switching power supply in IP65/IP67

Instructions for Use

## Table of Contents

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>About these instructions .....</b>                                 | <b>4</b>  |
| 1.1      | Target groups .....   | 4         |
| 1.2      | Explanation of symbols .....  | 4         |
| 1.3      | Additional documents .....  | 4         |
| 1.4      | Feedback about these instructions .....                               | 4         |
| <b>2</b> | <b>Notes on the product .....</b>                                     | <b>5</b>  |
| 2.1      | Product identification .....  | 5         |
| 2.2      | Scope of delivery.....  | 5         |
| 2.3      | Turck service .....   | 5         |
| <b>3</b> | <b>For your safety .....</b>  | <b>6</b>  |
| 3.1      | Intended use .....  | 6         |
| 3.2      | General safety notes.....   | 6         |
| <b>4</b> | <b>Product description .....</b>                                      | <b>7</b>  |
| 4.1      | Device overview .....   | 7         |
| 4.1.1    | Block diagram .....   | 8         |
| 4.1.2    | Operating elements.....   | 8         |
| 4.1.3    | Display elements .....  | 8         |
| 4.2      | Properties and features .....   | 8         |
| 4.3      | Functional principle .....  | 8         |
| 4.4      | Functions and operating modes .....                                   | 9         |
| 4.4.1    | User interface .....  | 9         |
| 4.4.2    | AC voltage input .....  | 9         |
| 4.4.3    | DC voltage input.....   | 9         |
| 4.4.4    | DC voltage outputs.....   | 10        |
| 4.4.5    | IO-Link interface.....  | 12        |
| <b>5</b> | <b>Installing .....</b>   | <b>13</b> |
| 5.1      | Special installation instructions: mounting altitude .....            | 13        |
| <b>6</b> | <b>Connecting .....</b>   | <b>14</b> |
| 6.1      | Connecting the AC or DC input voltage .....                           | 14        |
| 6.2      | Connecting the DC output voltage side .....                           | 15        |
| 6.3      | Connecting the device to IO-Link .....                                | 15        |
| <b>7</b> | <b>Commissioning .....</b>  | <b>16</b> |
| <b>8</b> | <b>Setting .....</b>  | <b>17</b> |
| 8.1      | Setting the device via LED bar and pushbuttons .....                  | 17        |
| 8.1.1    | Configuration mode .....  | 17        |
| 8.1.2    | Switching outputs on or off.....                                      | 17        |
| 8.1.3    | Resetting outputs.....  | 17        |
| 8.1.4    | Activating and deactivating the button lock.....                      | 18        |
| 8.2      | Setting the device via IO-Link.....                                   | 19        |
| 8.2.1    | Direct Parameter Page 1 .....   | 19        |
| 8.2.2    | Identification.....   | 19        |
| 8.2.3    | Index 0x02: System commands (according to IO-Link specification)..... | 20        |
| 8.2.4    | Index 0x0C: Device Access Locks.....                                  | 20        |
| 8.2.5    | Parameters .....  | 21        |

|           |   |           |
|-----------|---|-----------|
| <b>9</b>  | <b>Operating</b>                                      | <b>25</b> |
| 9.1       | Monitoring mode                                       | 25        |
| 9.2       | LED displays  | 25        |
| 9.3       | Process data (cyclic IO-Link data)                    | 28        |
| 9.4       | Diagnostic and status messages (acyclic IO-Link data) | 29        |
| 9.5       | IO-Link Events  | 33        |
| 9.6       | IO-Link error codes                                   | 34        |
| <b>10</b> | <b>Troubleshooting</b>                                | <b>35</b> |
| <b>11</b> | <b>Maintenance</b>                                    | <b>36</b> |
| <b>12</b> | <b>Repair</b>   | <b>36</b> |
| 12.1      | Returning devices                                     | 36        |
| <b>13</b> | <b>Disposal</b>                                       | <b>36</b> |
| <b>14</b> | <b>Technical data</b>                                 | <b>37</b> |
| 14.1      | AC input  | 37        |
| 14.2      | DC input  | 39        |
| 14.3      | DC output   | 39        |
| 14.4      | Efficiency and power losses                           | 41        |
| 14.5      | IO-Link interface                                     | 41        |
| 14.6      | General technical data                                | 42        |
| <b>15</b> | <b>Turck branches — contact data</b>                  | <b>44</b> |

# 1 About these instructions

These instructions describe the setup, functions and use of the product and help you to operate the product according to its intended purpose. Read these instructions carefully before using the product. This will prevent the risk of personal injury and damage to property. Keep these instructions safe during the service life of the product. If the product is passed on, pass on these instructions as well.

## 1.1 Target groups

These instructions are aimed at qualified personnel and must be carefully read by anyone mounting, commissioning, operating, maintaining, dismantling or disposing of the device.

## 1.2 Explanation of symbols

The following symbols are used in these instructions:



### **DANGER**

DANGER indicates a hazardous situation with a high level of risk, which, if not avoided, will result in death or serious injury.



### **WARNING**

WARNING indicates a hazardous situation with a medium level of risk, which, if not avoided, will result in death or serious injury.



### **CAUTION**

CAUTION indicates a hazardous situation with a medium level of risk, which, if not avoided, will result in moderate or minor injury.



### **NOTICE**

CAUTION indicates a situation which, if not avoided, may cause damage to property.



### **NOTE**

NOTE indicates tips, recommendations and important information about special action steps and issues. The notes simplify your work and help you to avoid additional work.



### **MANDATORY ACTION**

This symbol denotes actions that the user must carry out.



### **RESULT OF ACTION**

This symbol denotes the relevant results of an action.

## 1.3 Additional documents

Besides this document, the following material can be found on the Internet at [www.turck.com](http://www.turck.com):

- Data sheet
- Declarations of conformity (current version)
- Quick Start Guide
- Approvals

## 1.4 Feedback about these instructions

We make every effort to ensure that these instructions are as informative and as clear as possible. If you have any suggestions for improving the design or if some information is missing in the document, please send your suggestions to [techdoc@turck.com](mailto:techdoc@turck.com).

## 2 Notes on the product

### 2.1 Product identification

These instructions apply to the following IP65/IP67 power supply series PSU67:

- PSU67-1P-1M-2M4-24150-IOL-F (ID 100025928)

### 2.2 Scope of delivery

The delivery consists of the following:

- IP65/IP67 power supply
- Quick Start Guide

### 2.3 Turck service

Turck supports you in your projects — from the initial analysis right through to the commissioning of your application. The Turck product database at [www.turck.com](http://www.turck.com) offers you several software tools for programming, configuring or commissioning, as well as data sheets and CAD files in many export formats.

For the contact details of our branches worldwide, please see page [► 44].

## 3 For your safety

The product is designed according to state of the art technology. Residual hazards, however, still exist. Observe the following safety instructions and warnings in order to prevent danger to persons and property. Turck accepts no liability for damage caused by failure to observe these safety instructions.

### 3.1 Intended use

The power supply unit PSU67-1P-1M-2M4-24150-IOL-F is a stand-alone power supply for 1-phase mains systems for indoor use with IO-Link interface. The device is designed with IP65/IP67 protection and is suitable for use directly on the machine. The protection class can only be guaranteed if all mating connectors are firmly connected.

The switching power supply converts an AC input voltage of 100...240 VAC into a 24 VDC output voltage and makes it available at four current-limited outputs. The unit's four outputs are protected by internal electronic fuses (eFuse). The unit is suitable for use at altitudes up to 5000 m (16400 ft). Above 2000 m (6560 ft), the output current and overvoltage category must be reduced.

The device must only be used as described in these instructions. Any other use is not in accordance with the intended use. Turck accepts no liability for any resulting damage.

### 3.2 General safety notes

- The device must only be fitted, installed, operated, parameterized and maintained by trained and qualified personnel.
- Only use the device in compliance with the applicable national and international regulations, standards and laws.
- Only mount, dismount, install and maintain the device when it is de-energized. Secure against reconnection of the voltage.
- Do not open, modify or repair the device.
- The device meets the EMC requirements for the industrial areas. When used in residential areas, take measures to prevent radio frequency interference.
- The device is a "Class of Protection I" equipment according to IEC 61140.
- Only use the device with a proper PE (Protective Earth) connection.
- Do not connect the negative potential of any output externally to PE.
- The device is designed for pollution degree 3 areas in controlled environments.
- Only use the device with additional protective devices in the area of personal and machine protection.
- Operate the device exclusively within the technical specifications.

## 4 Product description

The 1-phase switching power supply PSU67-1P-1M-2M5-24250-IOL-F is designed in IP65/IP67. A 3-pin 7/8" female connector (XD1) is available for connecting the input voltage. The output voltage side is connected via two 4-pin 7/8" female connectors (XD2 and XD3). The device has four internal eFuses to protect the output voltage.

The IO-Link interface is designed as an A-coded M12 connector (X0). Configuration and diagnostics are performed either directly on the device via the operator interface (LEDs and buttons) or via IO-Link.

### Mating connectors

- Input voltage (XD1): 7/8" female connector, 3-pin
- Output voltage (XD2, XD3): 7/8" male connector, 4-pin
- IO-Link (X0): M12 female connector, A-coded, 5-pin

### 4.1 Device overview

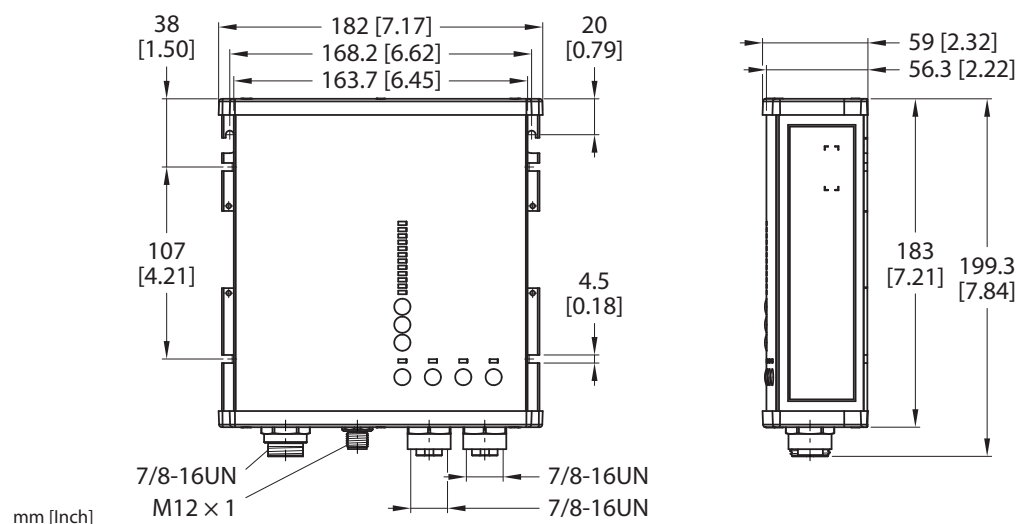


Fig. 1: Dimensions

#### 4.1.1 Block diagram

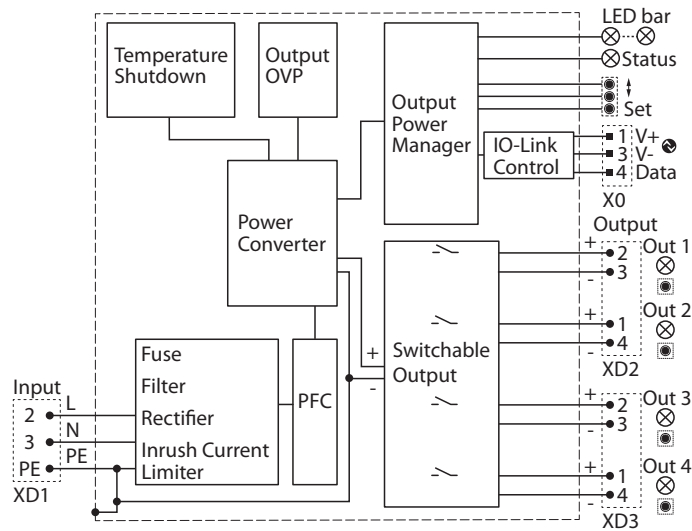


Fig. 2: Block diagram

#### 4.1.2 Operating elements

The device has the following operating elements:

- Buttons for requesting the device settings and for configuring the device [Voltage Set] and [↑] [↓].
- Buttons for switching the outputs [OUT1...OUT4] on and off.

#### 4.1.3 Display elements

The device has an LED bar (monitoring mode ► 25)) to display:

### 4.2 Properties and features

- Degree of protection IP65/IP67
- 1-phase AC input, 7/8", 3-pin
- 24 VDC output voltage, settable up to 28 VDC
- four current limited outputs, 2 × 7/8", 4-pin
- Fuse protection by four separate eFuses, adjustable up to 10 A
- AC input voltage range 100...240 VAC
- IO-Link interface
- Wide temperature range
- LED status display
- High efficiency, > 95 %
- Operator interface (LEDs and buttons)

### 4.3 Functional principle

The switching power supply converts an AC input voltage of 100...240 VAC into a 24 VDC output voltage and makes it available at four current-limited outputs. The unit's outputs are protected by internal electronic fuses (eFuse).

## 4.4 Functions and operating modes

### 4.4.1 User interface

#### Output level control

The buttons [Voltage Set] and [ $\uparrow$ ] [ $\downarrow$ ] are used to configure output voltage and trip current in the configuration mode [► 17]. After commissioning the power supply, the device is in monitoring mode (normal operation) for monitoring the output power.

#### Output control

The output LEDs (OUT1...OUT4) indicate the operating states of the corresponding outputs. The respective output is switched on and off via the associated button.

### 4.4.2 AC voltage input

The voltage input is designed for a 1-phase AC voltage of 100...240 VAC (nominal range).

#### Inrush current limitation

The power supply is equipped with an active inrush current limiting circuit, which limits the input inrush current to a very low value after switching on. The inrush current is usually lower than the permanent input current.

|                | AC, 100 V                   | AC, 120 V                  | AC, 230 V                |
|----------------|-----------------------------|----------------------------|--------------------------|
| Inrush current | Typ. 2.18 A <sub>peak</sub> | Typ. 2.6 A <sub>peak</sub> | Typ. 6 A <sub>peak</sub> |

The charging current in the EMI suppression capacitors is neglected in the first microseconds after switch-on.

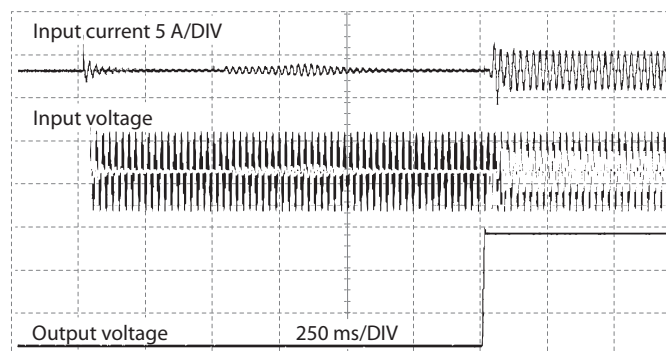


Fig. 3: Typical switch-on behavior at nominal load and 25 °C ambient temperature

#### Input protection

The unit is designed, tested and approved for branch circuits up to 32 A (IEC) and 20 A (UL) without additional protective device.

If an external fuse is used, use B or C characteristic circuit breakers with at least 6 A to avoid a nuisance tripping of the circuit breaker.

### 4.4.3 DC voltage input

The DC voltage input is designed for a DC voltage range of 110...300 VDC (nominal range) for use with a battery or similar DC power source.

#### 4.4.4 DC voltage outputs

The DC voltage outputs OUT1...OUT4 provide a stabilized and galvanically isolated 24 VDC output voltage (PELV/ES1). The negative potential of the outputs is permanently connected to PE within the unit. The outputs are electronically protected against open-circuit, overload and short-circuit and can supply any type of loads, including unlimited inductive and capacitive loads.

When connecting capacitors with capacitance  $>20$  mF to an output, this output may be switched off after switching on the device or the output or connecting the load. All outputs are individually current limited. In the event of an overload, the individual output switches off and must be reset manually via the associated button or via IO-Link. The output can be reset at the earliest 5 s after it has been switched off.

The outputs of the device are switched on in the delivery state. The outputs are not switched off in a safety-related manner.

The sum of the configured output power of all outputs can exceed the total output power. In this case, the outputs switch off one after the other in reverse order (OUT4, OUT 3, ...) until the total output power is within the permissible range again. The lower output in each case remains switched on to prevent voltage dips and to output current continuously.

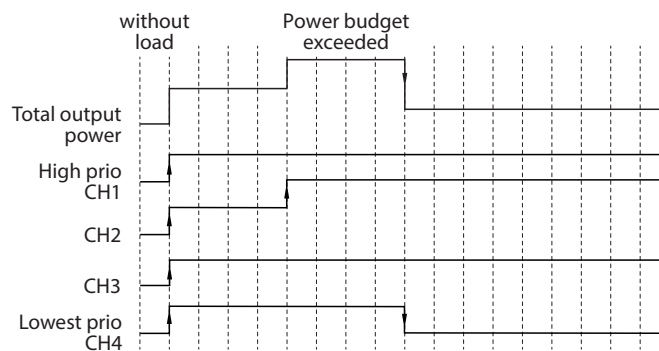


Fig. 4: Tripping of the channel with the lowest priority when the total output power is exceeded

The outputs then start automatically one after the other at intervals of 150 ms in the sequence OUT1...OUT4.

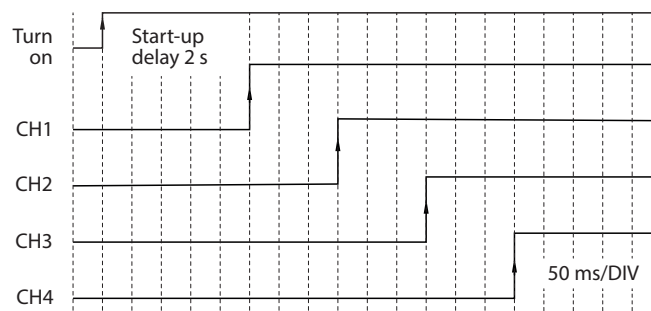


Fig. 5: Sequential start of outputs

## Hold-up time

The hold-up time is the time during which a power supply's output voltage remains within specification following the loss of input power. The hold-up time is output load dependent. At no load, the hold-up time can be up to several seconds. The status LED is on during this time.

|              | 100 VAC, 120 VAC, 230 VAC | Output load |
|--------------|---------------------------|-------------|
| Hold-up time | typ. 75 ms<br>min. 56 ms  | 150 W       |
|              | typ. 44 ms<br>min. 29 ms  | 300 W       |

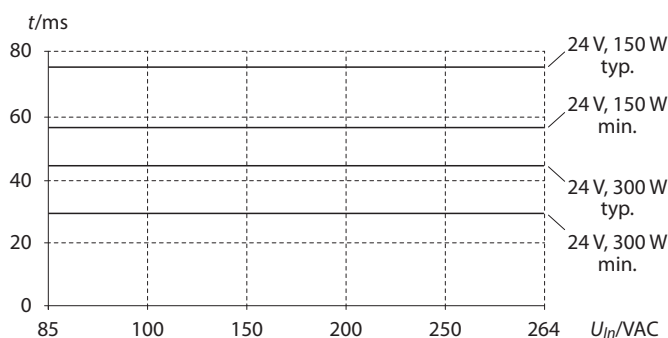


Fig. 6: Hold-up time vs. input voltage

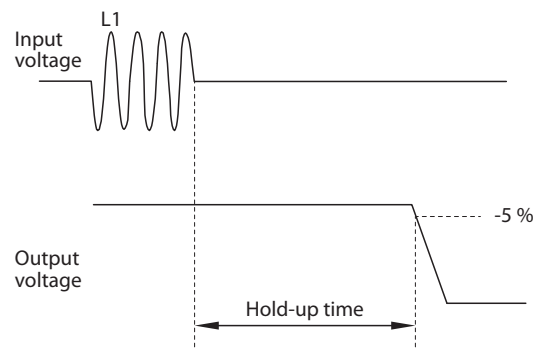


Fig. 7: Shutdown behavior

## Support of short-term peak loads

The device is designed to support loads with a higher short-term power demand (peak loads). Temporary peak loads cause an increased power demand for a short time, which is controlled internally in the device by an output power manager. If the average load exceeds the sum of all output powers, the output voltage collapses.

To avoid a collapse of the output voltage, observe the following rules:

- The power demand of the short-time load pulse must be below 200 % of the nominal output power.
- The duration of the load pulse must be shorter than the max. permissible duration for the additional power.
- The average power should be lower than the rated output power.
- The RMS output current must be lower than the specified continuous output current. Continuous increased RMS current may cause thermal shutdown of the device.

#### 4.4.5 IO-Link interface

The devices (PSU67-...-IOL) have an IO-Link interface V1.1 for connection to IO-Link masters. The device can be parameterized via IO-Link using the associated IODD. In addition, device-internal measurement data and diagnostics are made available via IO-Link. The IODDs are available for download free of charge at [www.turck.com](http://www.turck.com).

The devices can also be operated without active IO-Link communication. Settings made via IO-Link during commissioning for example, are stored in the EEPROM of the device and are available even if the IO-Link communication fails.

## 5 Installing

The housing of the device ensure IP65 and IP67 protection when all mating connectors are firmly connected.



### CAUTION

Sharp edges on the back of the device

#### Risk of injury

- ▶ Mount the devices on a sufficiently large, even surface so that all sharp edges are covered.

- ▶ Mount the device vertically with the connection level facing downwards on a flat surface using two M4 screws each at the upper and lower mounting holes.
- ▶ Other mounting orientations: Reduce the output current, s. „General technical data“.
- ▶ Do not obstruct airflow. Do not cover ventilation fins.
- ▶ Observe the minimum installation clearances: 50 mm on top and bottom, 10 mm on the front and 10 mm left and right side.

### Device cooling

The device uses convection cooling. An external fan is not necessary.

### 5.1 Special installation instructions: mounting altitude

The device is generally designed for altitudes up to 5000 m (16400 ft). The devices may only be used as described in these instructions. Above 2000 m (6560 ft), the output current and overvoltage category must be reduced.

When using the device in TN, TT and IT networks the following applies:

- TN, TT mains systems with earthed neutral and IT star mains systems with insulation monitoring: Use in zones of overvoltage category III up to an altitude of 2000 m (6560 ft), use in zones of overvoltage category II up to an altitude of 5000 m (16400 ft)
- TN, TT, IT delta mains systems or IT star mains systems without insulation monitoring: Use in zones of overvoltage category II up to 2000 m (6560 ft)

## 6 Connecting



### **DANGER**

High voltage

**Danger to life due to electric shock!**

- ▶ Only connect the device when it is de-energized.
- ▶ Secure against reconnection of the voltage.

### 6.1 Connecting the AC or DC input voltage

The device has a 3-pin 7/8" connector to connect the AC or respectively the DC input voltage. The maximum tightening torque is 0.8 Nm.

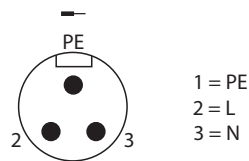


Fig. 8: Pin assignment 7/8" connector, AC or DC input voltage (XD1)

#### Connecting the AC input voltage

- ▶ Connect the AC input voltage to the device according to the pin assignment.

#### Connecting the DC input voltage

- ▶ Connect the battery or a similar DC power source to the device according to the pin assignment.

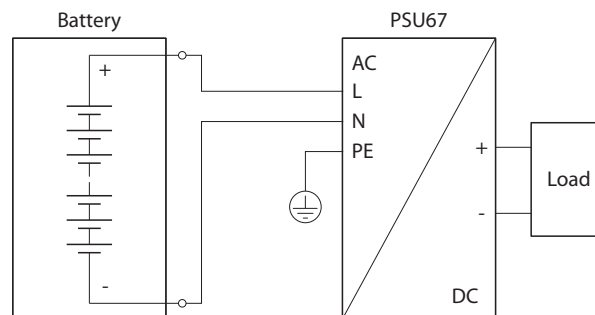


Fig. 9: DC input

- ▶ Connect the PE terminal to a ground wire or to the machine ground.



### **NOTICE**

Incorrect choice of DC voltage source

**Malfunction or damage to the device**

- ▶ Do not use a DC link of a frequency converter as a DC source.

## 6.2 Connecting the DC output voltage side

For connecting the DC output side, the device has two 4-pin 7/8" connectors. The maximum tightening torque is 0.8 Nm.

- ▶ Connect the DC output side according to the pin assignment shown below.

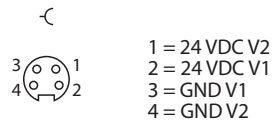


Fig. 10: Pin assignment, 7/8" connector, DC output voltage side

### Notes on connecting loads

- ▶ Only connect return voltages < 35 V from a load to the outputs.
- ▶ Do not connect outputs or devices in parallel.

## 6.3 Connecting the device to IO-Link

The device has a 5-pin, A-coded M12 connector for the connection to IO-Link. The maximum tightening torque is 0.6 Nm.

- ▶ Connect the device to IO-Link according to the pin assignment shown below.

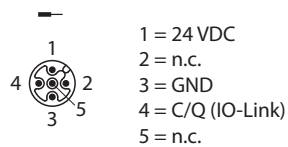


Fig. 11: Pin assignment, IO-Link interface (X0)

## 7 Commissioning

After connecting the wires and by switching on the AC input voltage, the device automatically goes into operation.

## 8 Setting

### 8.1 Setting the device via LED bar and pushbuttons

The device has an LED bar and three buttons for monitoring output power and channel output current (monitoring mode ▶ 25)) and for configuring output voltage and trip current. In configuration mode, the output voltage and trigger current can be set to monitor the current of the outputs OUT1...OUT4.

In addition, a button lock can be set up and the outputs of the device can be switched on or off independently.

#### 8.1.1 Configuration mode

##### Output voltage setting

The output voltage is set for both outputs.

- ▶ Press [Voltage Set] for 3 s.
- ⇒ The device changes to the start mode "Set output voltage", all LEDs flash briefly. The actual setting is indicated by a green LED on the LED bar.
- ▶ Press [↑] and [↓] buttons to set the value for the output voltage.
- ⇒ The set value is displayed via the LED bar. All orange LEDs are off. The setting becomes effective immediately.

Without further pressing the buttons, the LED bar will return from any other mode to normal mode after 15 s.

##### Setting the tripping current

The tripping current is set separately for the outputs OUT1...OUT4.

- ▶ Press and hold the [Voltage Set] button for 3 s to switch to configuration mode.
- ⇒ All LEDs flash briefly and the actual setting is indicated by a green LED on the LED bar
- ▶ Press the [Voltage Set] key 1 × to select the output for which the trigger current is to be set. The orange channel LED (OUT1...OUT4) indicates for which output the trigger current is set.
- ▶ Press [↑] and [↓] buttons to set the setpoint (1...12 A) (Example: 20 %-LED = 3 A).
- ⇒ The setting becomes effective immediately.

Without further pressing the buttons, the LED bar will return from any other mode to normal mode after 15 s.

#### 8.1.2 Switching outputs on or off

The outputs can be switched on or off independently of each other. In the delivery state, all outputs of the device are switched off.

- ▶ Press and hold the button on the output channel (OUT1...OUT4) for 1 s to switch a channel on or off manually.

#### 8.1.3 Resetting outputs

In case of an error at the output:

- ▶ Press and hold the button on the output (OUT1...OUT4) for longer than 1 s to reset the output.

#### 8.1.4 Activating and deactivating the button lock

##### Activate button lock

- ▶ Hold [↑] and [↓] buttons simultaneously for 3 s.
- ⇒ All LEDs flash for 5 s to indicate that the key lock status has changed. The display returns to normal operation.

##### Check button lock

- ▶ Press and hold the [Voltage Set] key for 3 s.
- ⇒ If the button lock is activated, all LEDs flicker for 5 s.

##### Remove button lock

- ▶ Hold [↑] and [↓] buttons simultaneously for 3 s.
- ⇒ All LEDs flash for 5 s to indicate that the key lock status has changed. The display returns to normal operation.

## 8.2 Setting the device via IO-Link

### 8.2.1 Direct Parameter Page 1

| ISDU Index<br>Hex.<br>(dec.) | Sub index | Object name                | Access<br>Read (R)<br>Write (W) | Length in byte | Meaning  |
|------------------------------|-----------|----------------------------|---------------------------------|----------------|--|
| 0x00<br>(0)                  |           | Direct Parameter Page 1    | R                               | 16             |  |
|                              | 0x02      | Master cycle time          | R                               | 1              |  |
|                              | 0x03      | Min. cycle time            | R                               | 1              |  |
|                              | 0x04      | M sequence capability      | R                               | 1              |  |
|                              | 0x05      | IO-Link version ID         | R                               | 1              | 17   |
|                              | 0x06      | Process data input length  | R                               | 1              |  |
|                              | 0x07      | Process data output length | R                               | 1              |  |
|                              | 0x08      | Vendor ID                  | R                               | 2              | ID for Turck:<br>0x013D                                  |
|                              | 0x09      |                            |                                 |                |  |
|                              | 0x0A      | Device ID                  | R                               | 3              | E. g.: PSU67-3P-1S-2L-24250-IOL-F:<br>2228224 (0x220000) |
|                              | 0x0B      |                            |                                 |                |  |
|                              | 0x0C      |                            |                                 |                |  |
|                              | 0x10      | Standard command           | R/W                             | 1              | 129: application reset<br>130: restore factory settings  |

### 8.2.2 Identification

| ISDU Index<br>Hex.<br>(dec.) | Object name              | Access<br>Read (R)<br>Write (W) | Length in byte | Meaning   |
|------------------------------|--------------------------|---------------------------------|----------------|---|
| 0x10<br>(16)                 | Vendor name              | R                               | 16             | Turck   |
| 0x11<br>(17)                 | Vendor text              | R                               | 32             | www.turck.com   |
| 0x12<br>(18)                 | Product name             | R                               | 32             | PSU67-...   |
| 0x13<br>(19)                 | Product ID               | R                               | 16             | ID of the device  |
| 0x14<br>(20)                 | Product text             | R                               | 32             | IP67 Power Supply   |
| 0x15<br>(21)                 | Serial number            | R                               | 16             | Sequential serial number  |
| 0x16<br>(22)                 | Hardware revision        | R                               | 8              | Hardware revision of the device, e. g. V1.0                       |
| 0x17<br>(23)                 | Firmware revision        | R/W                             | 16             | Firmware revision of the device, e. g. V1.0.7.0                   |
| 0x18<br>(24)                 | Application Specific Tag | R/W                             | 32             | Default "****"<br>Field for customer or application specific data |

| ISDU<br>Index<br>Hex.<br>(dec.) | Object name  | Access<br>Read (R)<br>Write (W) | Length<br>in byte | Meaning   |
|---------------------------------|--------------|---------------------------------|-------------------|---|
| 0x19<br>(36)                    | Function Tag | R/W                             | 32                | Default "****"<br>Field for the application specific device<br>function                     |
| 0x1A<br>(26)                    | Location Tag | R/W                             | 32                | Default "****"<br>Field for the application-specific installation location of the<br>device |

### 8.2.3 Index 0x02: System commands (according to IO-Link specification)

| Command |                          |
|---------|--------------------------|
| 129     | Application reset        |
| 130     | Restore factory settings |

### 8.2.4 Index 0x0C: Device Access Locks

Default values are shown in **bold**.

| Sub index<br>Hex. (dec.) | Object name                   | Bit offset | Data type | Meaning   |
|--------------------------|-------------------------------|------------|-----------|---|
| 1                        | Parameter (write) access lock | 0          | BOOL      | Not implemented                                   |
| 2                        | Data storage lock             | 1          |           | <b>0: not activated (default)</b><br>1: activated |
| 3                        | Local parameterization lock   | 2          |           | Not implemented                                   |
| 4                        | Local user interface lock     | 3          |           | Not implemented                                   |

## 8.2.5 Parameters

### Parameter overview

| Index<br>Hex.<br>(dec.) | Sub<br>index | Parameter name                           | Data type   | Length<br>in bit | Unit                                  | Access<br>Read (R)<br>Write (W) |
|-------------------------|--------------|--|-------------|------------------|---------------------------------------|---------------------------------|
| 0x65<br>(101)           | 0            | Standby                                  | BOOL        | 8                |                                       | RW                              |
| 0x67<br>(103)           | 0            | Configuration setting                    | UINT8       | 8                |                                       | RW                              |
| 0x68<br>(104)           | 0            | PSU total output current pre-alarm level | UINT16      | 16               | 2 <sup>-8</sup> A/bit                 | RW                              |
| 0x69<br>(105)           | 0            | Output Voltage Setpoint                  | UINT16      | 16               | 2 <sup>-8</sup> V/Bit                 | RW                              |
| 0x6A<br>(106)           | 0            | eFuses channel on/off                    | Set of BOOL | 8                | -                                     | RW                              |
| 0x6C<br>(108)           | 0            | eFuse trip value Ch1                     | UINT16      | 16               | 2 <sup>-8</sup> A/bit                 | RW                              |
|                         | 1            | ...                                      |             |                  |                                       |                                 |
|                         | 2            |  |             |                  |                                       |                                 |
|                         | 3            | eFuse trip value CH4                     |             |                  |                                       |                                 |
| 0x6D<br>(109)           | 0            | eFuses pre-alarm level Ch1               | UINT8       | 8                | 2 <sup>-7</sup> /Bit<br>(0.78 %/ Bit) | RW                              |
|                         | 1            | ...                                      |             |                  |                                       |                                 |
|                         | 2            |  |             |                  |                                       |                                 |
|                         | 3            | eFuses pre-alarm level Ch4               |             |                  |                                       |                                 |

### Standby — index 0x65 (101)

This parameter can be used to actively set the device to the "standby" state.

| Format | Length |
|--------|--------|
| BOOL   | 1 bit  |

Default values are shown in **bold**.

| Value    | Meaning   |
|----------|---|
| <b>0</b> | <b>False</b> PSU normal operation   |
| <b>1</b> | <b>True</b> PSU standby<br>Power supply in standby mode, all outputs are switched off |

### Configuration setting — index 0x67 (103)

This parameter defines the interface via which the device can be configured. In addition, the device can also be locked against configuration.

| Format | Length |
|--------|--------|
| UINT8  | 8 bit  |

Default values are shown in **bold**.

| Value    | Meaning  |
|----------|--|
| 0        | Human-machine interface only Configuration of the device only possible directly on the device via the user interface |
| 1        | IO-Link only Configuration of the device only possible via IO-Link (IODD)  |
| <b>2</b> | <b>Both</b> Configuration of the device possible both directly on the device and via IO-Link (IODD)                  |
| 3        | None (button lock) Configuration locked  |

### Total converter current pre-alarm level — index 0x68 (104)

This parameter defines pre-alarm level for the total current.

| Format | Length |
|--------|--------|
| UINT16 | 16 bit |

Default values are shown in **bold**.

Unit:  $2^{-8}$  A/bit  
 Value range: 256...25600 = 1...100 A  
 Default value: **5120 = 20 A**

### Output voltage setpoint — index 0x69 (105)

This parameter defines the setpoint for the output voltage.

| Format | Length |
|--------|--------|
| UINT16 | 16 bit |

Default values are shown in **bold**.

Unit:  $2^{-8}$  V/bit  
 Value range: 6144...7168 = 24...28 V  
 Default value: **6272 = 24.5 V**

## eFuse ch... on/off — index 0x6A (106)

This parameter enables the eFuse to be switched on and off for the respective channel.

| Format | Length |
|--------|--------|
| BOOL   | 8 bit  |

Default values are shown in **bold**.

| Sub index | Object name      | Bit offset | Value        | Meaning                          |
|-----------|------------------|------------|--------------|----------------------------------|
| 1         | eFuse ch1 on/off | 0          | 0            | eFuse for channel 1 switched off |
|           |                  |            | 1            | eFuse for channel 1 switched on  |
| 2         | eFuse ch2 on/off | 1          | s. channel 1 |                                  |
| 3         | eFuse ch3 on/off | 2          |              |                                  |
| 4         | eFuse ch4 on/off | 3          |              |                                  |

## eFuse trip value ch... — index 0x6C (108)

This parameter defines the trigger value of the eFuse for the respective channel.

| Format | Length              |
|--------|---------------------|
| UINT16 | 2 bytes per channel |

| Sub index | Object name          | Bit offset |
|-----------|----------------------|------------|
| 1         | eFuse trip value Ch1 | 63...48    |
| 2         | eFuse trip value Ch2 | 47... 32   |
| 3         | eFuse trip value Ch3 | 31...16    |
| 4         | eFuse trip value Ch4 | 15...0     |

Default values are shown in **bold**.

Unit:  $2^{-8}$  A/bit  
Value range: 256...3072 = 1...12 A V  
Default value: **3072 = 12 A**

| Assignment |           |         |           |         |           |         |           |       |
|------------|-----------|---------|-----------|---------|-----------|---------|-----------|-------|
| Byte       | 0         | 1       | 2         | 3       | 4         | 5       | 6         | 7     |
| Bit offset | 63...56   | 55...48 | 47...40   | 39...32 | 31...24   | 23...16 | 15...8    | 7...0 |
| Sub index  | 1         | 1       | 2         | 2       | 3         | 3       | 4         | 4     |
| Bit order  | 15...8    | 7...0   | 15...8    | 7...0   | 15...8    | 7...0   | 15...8    | 7...0 |
| Trip value | Channel 1 |         | Channel 2 |         | Channel 3 |         | Channel 4 |       |

## eFuse pre-alarm level ch... — index 0x6D (109)

This parameter defines the value (in percent) from which a pre-alarm is generated for the subsequent triggering of the eFuse at the respective channel.

| Format                | Length            |
|-----------------------|-------------------|
| 32-bit record (UINT8) | 8 bit per channel |

| Sub index | Object name                | Bit offset |
|-----------|----------------------------|------------|
| 1         | eFuses pre-alarm level Ch1 | 24         |
| 2         | eFuses pre-alarm level Ch2 | 16         |
| 3         | eFuses pre-alarm level Ch3 | 8          |
| 4         | eFuses pre-alarm level Ch4 | 0          |

Default values are shown in **bold**.

Unit:  $2^{-7}$  %/bit  
Value range: 13...192 = 10.17...150 %  
Default value: **103 = 80.46875 %**

| Assignment |           |           |           |           |
|------------|-----------|-----------|-----------|-----------|
| Byte       | 0         | 1         | 2         | 3         |
| Bit offset | 31...24   | 23...16   | 15...8    | 7...0     |
| Sub index  | 1         | 2         | 3         | 4         |
| Bit order  | 7...0     | 7...0     | 7...0     | 7...0     |
| Trip value | Channel 1 | Channel 2 | Channel 3 | Channel 4 |

## 9 Operating



### CAUTION

Hot surfaces

#### Risk of burns

- ▶ Do not touch the housing when switching on and immediately after switching off.

### 9.1 Monitoring mode

Mode: Monitoring output power (normal operation)

In the "Monitoring output power" mode, the LEDs display the current output power as a percentage of 300 W (40 % = 120 W, 100 % = 300 W). For values above 100 %, the 125-% LED flashes. Immediately after switching on, the LEDs display the total output power.

Mode: Monitoring channel output current

- ▶ In the "Monitoring output power" mode (normal operation), press [↑] [↓] buttons to switch to the "Monitoring channel output current" mode.
- ⇒ LED OUT1 lights up constantly orange. The current output current for output 1 is displayed via the LED bar (2...10 A).
- ▶ Press [↑] [↓] buttons to change the output channel.
- ▶ To change to normal operation: Press [↑] or [↓] buttons until OUT1 or OUT4 is skipped.
- ⇒ When all channel LEDs are off, the unit is back in normal mode for monitoring the total output power.

### 9.2 LED displays

The unit has the following LED indicators:

- Operating status (Status)
- Output power in % (%-LEDs)
- Channel LEDs (OUT1...OUT4)

| LED %           | Meaning   |
|-----------------|---|
| 0...100 %       |   |
| Green           | The DC output power is 20...100 % of the max. output power.   |
| > 100 %         |   |
| Orange          | The DC output power above 100 % of the max. output power.   |
| STATUS LED      | Meaning   |
| Green           | The DC output voltage is above 90 % of the setpoint voltage. All outputs operate according to their settings.   |
| Off             | Possible causes: <ul style="list-style-type: none"> <li>■ The DC output voltage is below 90 % of the setpoint voltage:</li> <li>■ An output channel has tripped:</li> <li>■ The power supply is not switched on:</li> </ul> |
| Red             | AC input voltage too low  |
| Orange flashing | Output switched off and in Hiccup Plus mode (18 s)  |

| STATUS LED   | Meaning   |
|--------------|---|
| Red flashing | The device has switched off due to overtemperature. As soon as the temperature reaches the normal operating range, the output switches on again and the STATUS LED lights up permanently green. |

| LED OUT1...<br>OUT4             | Meaning   |
|---------------------------------|---|
| Green                           | Output switched-on  |
| Off                             | No input voltage connected or output active switched off via pushbutton   |
| Green flashing<br>(2 Hz)        | Current/power budget exceeded<br>The sum of the output currents exceeded the permissible total output current of the power supply. Outputs with low priority are switched off   |
| Green flashing<br>(4 Hz)        | Pushbutton lock It is not possible to switch the output on or off via the pushbutton.<br>Possible causes: <ul style="list-style-type: none"> <li>■ Pushbutton is locked by "external interface" or "button lock feature".</li> <li>■ Interval between charge and switch-on cycles &lt; 5 s (MOSFET protection).</li> <li>■ Too high temperature at the output.</li> </ul>   |
| Orange                          | Pre-alarm: Output switched on, output current exceeds pre-alarm level, overload imminent.   |
| Orange flashing<br>(1 Hz)       | Overcurrent at output due to overload<br>The eFuse at the output has tripped. The output has switched off. <ul style="list-style-type: none"> <li>► Press pushbutton at the output(OUT1...OUT4) to restart the channel.</li> </ul>  |
| Orange flashing<br>(2 Hz)       | Installation faulty, cables or connected hardware at the outputs are not installed correctly. The output has switched off automatically. <ul style="list-style-type: none"> <li>► Switch off channel manually via pushbutton at output (OUT1...OUT4).</li> </ul> <p>Conditions:</p> <ul style="list-style-type: none"> <li>■ PSU with NEC outputs: Difference between positive and negative current of the output has been &gt;1 A for 6...6.5 s</li> <li>■ PSU without NEC outputs: Connector negative wire overcurrent according to negative trip curve, or Output was contributing to negative overcurrent of another output.</li> </ul> |
| Orange flashing<br>(4 Hz)       | Short-circuit at output<br>The eFuse at the output has tripped. The output has switched off (output current at channel > 48 A).<br>Possible causes: <ul style="list-style-type: none"> <li>■ Electrical short circuit</li> <li>■ Too high loads connected</li> <li>■ Plugging in a large capacitance during operation</li> </ul> <ul style="list-style-type: none"> <li>► Press the button at the output (OUT1...OUT4). Outputs with eFuse try to restart automatically.</li> </ul>   |
| Orange/green<br>flashing (2 Hz) | MOSFET overtemperature limit reached (125 °C)<br>The output switches on again automatically when the temperature has dropped to max. 90 °C.   |
| Red                             | Hardware Fault, MOSFET damaged (short circuit), PSU will be turned off.<br>Cause: The power switch of a specific output is damaged. Replacing the power supply may be necessary.  |
| Red flashing<br>(1 Hz)          | Hardware of the measuring circuit defective or values outside the permissible range.<br>Replacement of the power supply unit may be necessary<br>Possible causes: <ul style="list-style-type: none"> <li>■ The deviations of the internal output current sensors exceed the permissible limits.</li> <li>■ Temperature sensor measurement out of range (-40 °C or +150 °C for more than 5 s).</li> </ul>  |

### 9.3 Process data (cyclic IO-Link data)

The process data is sent cyclically to the IO-Link master. The device sends 2 bytes of process data.

| Data                           | Resolution            | Sub index | Data type | Length in bit | Bit offset | Description  |
|--------------------------------|-----------------------|-----------|-----------|---------------|------------|--|
| Actual output total current    | 2 <sup>-8</sup> A/bit | 1         | UINT16    | 16            | 104        | Total output current (actual value)  |
| Actual output voltage 1        | 2 <sup>-8</sup> V/bit | 2         | UINT16    | 16            | 88         | Actual output voltage  |
| eFuse current ch1              | 2 <sup>-8</sup> A/bit | 3         | 72        | UINT16        | 16         | Output current eFuse (actual value)  |
| eFuse current ch2              |                       | 4         | 56        |               |            |  |
| eFuse current ch3              |                       | 5         | 40        |               |            |  |
| eFuse current ch4              |                       | 6         | 24        |               |            |  |
| eFuse state ch1                |                       | 10        | 16        | BOOL          | 1          | State of the eFuse:<br>0: inactive, cause: s. sub index 14...17 or sub index 18...21<br>1: active: eFuse switched on, output voltage available |
| eFuse state ch2                |                       | 11        | 17        |               |            |  |
| eFuse state ch3                |                       | 12        | 18        |               |            |  |
| eFuse state ch4                |                       | 13        | 19        |               |            |  |
| eFuse ch1, overload trip state |                       | 14        | 8         | BOOL          | 1          | Trip state of the eFuse in case of an overload:<br>0: OK<br>1: tripped, overload at output   |
| eFuse ch2, overload trip state |                       | 15        | 9         |               |            |  |
| eFuse ch3, overload trip state |                       | 16        | 10        |               |            |  |
| eFuse ch4, overload trip state |                       | 17        | 11        |               |            |  |
| eFuse ch1, short-circuit state |                       | 18        | 0         | BOOL          | 1          | Trip state of the eFuse in case of as short-circuit:<br>0: OK<br>1: tripped, short-circuit at output   |
| eFuse ch2, short-circuit state |                       | 19        | 1         |               |            |  |
| eFuse ch3, short-circuit state |                       | 20        | 2         |               |            |  |
| eFuse ch4, short-circuit state |                       | 21        | 3         |               |            |  |

## 9.4 Diagnostic and status messages (acyclic IO-Link data)

|               | Index<br>Hex.<br>(dec.) | Sub<br>index | Data<br>type | Bit<br>offset | Resolution/<br>unit | Description/comment   |
|---------------|-------------------------|--------------|--------------|---------------|---------------------|---|
| EEPROM Status | 0x40<br>(64)            | 0            | UINT8        | 7...0         |                     | 0: Ok<br>1: recoverable error detected<br>2: unrecoverable error  |
| PSU events    | 0x41<br>(65)            | 0            | UINT16       |               |                     | Parameter access via sub index 0 only   |
|               |                         | 1            | BOOL         | 0             |                     | Bit 0: Output ok<br>Output voltage > 90 % of the set output voltage, no output triggered  |
|               |                         | 2            |              | 1             |                     | Bit 1: DC-Warning:<br>Output voltage dropped by more than 10 % below set output voltage   |
|               |                         | 3            |              | 2             |                     | Bit 2: additional power:<br>PSU delivers additional power for more than 1 s   |
|               |                         | 4            |              | 3             |                     | Bit 3: Overtemperature CAP  |
|               |                         | 5            |              | 4             |                     | Bit 4: Overtemperature PSU:<br>The temperature of the internal unit is too high   |
|               |                         | 6            |              | 5             |                     | Bit 5: Overload:<br>Total output load higher than permitted   |
|               |                         | 7            |              | 6             |                     | Bit 6: High voltage input:<br>AC input voltage exceeds operating range  |
|               |                         | 8            |              | 7             |                     | Bit 7: Low voltage input:<br>AC input voltage falls below operating range   |
|               |                         | 9            |              | 8             |                     | Bit 8: Power supply failed:<br>no internal connection from IO-Link transceiver to power supply  |
|               |                         | 10           |              | 9             |                     | Bit 9: Predictive maintenance power supply:<br>Estimated remaining lifetime 10 %, power supply performance possibly limited due to component aging effects. |
|               |                         | 11           |              | 10            |                     | Bit 10: 2-phase operation:<br>One line of the 3-phase system is missing   |
|               |                         | 14           |              | 13            |                     | Bit 13: PSU hardware failure:<br>Internal hardware error in PSU   |
| Stress level  | 0x42<br>(66)            | 0            | UINT8        | 0...7         |                     | Current load:<br>0: < 5 %<br>1: > 5 %<br>2: > 25 %<br>3: > 50 %<br>4: > 75 %  |

|                                      | Index<br>Hex.<br>(dec.) | Sub<br>index | Data<br>type             | Bit<br>offset | Resolution/<br>unit    | Description/comment  |
|--------------------------------------|-------------------------|--------------|--------------------------|---------------|------------------------|--|
| Remaining endurance<br>LED coded     | 0x43<br>(67)            | 0            | UINT8                    | 0...7         |                        | Endurance:<br>0: <10 %<br>1: > 10 %<br>2: > 25 %<br>3: > 50 %<br>4: > 75 %       |
| Remaining Endurance                  | 0x44<br>(68)            | 0            | UINT8                    | 0...7         | %                      | Value range 10... <b>99</b> %  |
| Temperature<br>secondary inside      | 0x45<br>(69)            | 0            | INT16                    | 15...0        | 2 <sup>-7</sup> °C/bit | Value range: -5120...32640   |
| Max. temperature<br>secondary inside | 0x46<br>(70)            | 0            | INT16                    | 15...0        | 2 <sup>-7</sup> °C/bit | Value range: -5120...32640   |
| Temperature<br>primary inside        | 0x47<br>(71)            | 0            | INT16                    | 15...0        | 2 <sup>-7</sup> °C/bit | Value range: -5120...32640   |
| Max. temperature<br>primary inside   | 0x48<br>(72)            | 0            | INT16                    | 15...0        | 2 <sup>-7</sup> °C/bit | Value range: -5120...32640   |
| AC input voltage RMS                 | 0x4E<br>(78)            | 0            | UINT16                   | 15...0        | 2 <sup>-4</sup> V/bit  | Actual input voltage RMS<br>(phase-phase)<br>Value range: 0...24000 (0...1500 V) |
| Actual output voltage                | 0x4F<br>(79)            | 0            | UINT16                   | 15...0        | 2 <sup>-8</sup> V/bit  | Value range: 0...12544 (0...49 V)  |
| Converter average<br>current         | 0x51<br>(81)            | 0            | UINT16                   | 15...0        | 2 <sup>-8</sup> A/bit  | Value range: 0...12800 (0...50 V)  |
| eFuse lout all channels              | 0x54<br>(84)            | 0            | UINT16<br>(array)        | 63...0        | 2 <sup>-8</sup> A/bit  | Output current eFuse<br>Value range: 0:12800 (0 ...50 A)                         |
| eFuse lout Ch1                       |                         | 1            | UINT16                   | 63...48       |                        |  |
| eFuse lout Ch2                       |                         | 2            |                          | 47...32       |                        |  |
| eFuse lout Ch3                       |                         | 3            |                          | 31...16       |                        |  |
| eFuse lout Ch4                       |                         | 4            |                          | 15...0        |                        |  |
| eFuse output status<br>all channels  | 0x55<br>(85)            | 0            | BOOL<br>(array)          |               |                        | Parameter access via sub index 0 only  |
| eFuse output status Ch 1             |                         |              | 8-bit<br>record          | 0             |                        | 0: off   |
| eFuse output status Ch 2             |                         |              |                          | 1             |                        | 1: on  |
| eFuse output status Ch 3             |                         |              |                          | 2             |                        | Bit 4...7: reserved  |
| eFuse output status Ch 4             |                         |              |                          | 3             |                        |  |
| eFuse trip status Ch1                | 0x56<br>(86)            | 0            | 4-bit<br>ENUM<br>(array) | 3...0         |                        | Parameter access via sub index 0 only  |
| eFuse trip status Ch2                |                         |              |                          | 7...4         |                        | 0: No trip   |
| eFuse trip status Ch3                |                         |              |                          | 11...8        |                        | 1: Overload trip   |
| eFuse trip status Ch4                |                         |              |                          | 15...12       |                        | 2: Short circuit trip  |
|                                      |                         |              |                          |               |                        | 3: Temperature trip  |
|                                      |                         |              |                          |               |                        | 4: Power budget trip   |
|                                      |                         |              |                          |               |                        | 5: Installation failure trip   |
|                                      |                         |              |                          |               |                        | 6: Sensor fault trip   |
|                                      |                         |              |                          |               |                        | 7: Fatal fault trip  |

## Counter

|   | Index<br>Hex.<br>(dec.) | Sub<br>index | Data<br>type      | Bit<br>offset | Resolution/<br>unit | Description/comment                   |
|---|-------------------------|--------------|-------------------|---------------|---------------------|---------------------------------------|
| Operating hours (total)                                 | 0x49 (73)               | 0            |                   |               |                     | Parameter access via sub index 0 only |
| ■ Hours   |                         | 1            | UINT32            | 39...8        | h                   |                                       |
| ■ Minutes   |                         | 2            | UINT8             | 7...0         | min                 | Value range: 0...59                   |
| Transient VDE-0160<br>Counter overall                   | 0x4A (74)               | 0            | UINT32            | 31...0        |                     | Value range: 0...59                   |
| Transient VDE-0160<br>counter overall last<br>2 minutes | 0x4B (75)               | 0            | UINT32            | 31...0        |                     | Value range: 0...150000               |
| Turn-on Counter   | 0x52 (82)               | 0            | UINT32            | 31...0        |                     | Value range: 0...150000               |
| Uptime since last<br>turn-on                            | 0x53 (83)               | 0            |                   |               |                     | Parameter access via sub index 0 only |
| ■ Hours   |                         | 1            | UINT32            | 39...8        | h                   |                                       |
| ■ Minutes   |                         | 2            | UINT8             | 7...0         | min                 | Value range: 0...59                   |
| eFuse, number of<br>startups all channels               | 0x57 (87)               | 0            | UINT32<br>(array) | 127...<br>0   |                     | Value range: 0...150000               |
| eFuse number of<br>startups Ch1                         |                         | 1            | UINT32            | 127...<br>96  |                     |                                       |
| eFuse number of<br>startups Ch2                         |                         | 2            |                   | 95...<br>64   |                     |                                       |
| eFuse number of<br>startups Ch3                         |                         | 3            |                   | 63...<br>32   |                     |                                       |
| eFuse number of<br>startups Ch4                         |                         | 4            |                   | 31...0        |                     |                                       |
| eFuse, number of<br>overcurrents all<br>channels        | 0x58 (88)               | 0            | UINT16<br>(array) | 63...0        |                     | Value range: 0...150000               |
| eFuse number of<br>overcurrents Ch1                     |                         | 1            | UINT16            | 63...<br>48   |                     |                                       |
| eFuse number of<br>overcurrents Ch2                     |                         | 2            |                   | 47...<br>32   |                     |                                       |
| eFuse number of<br>overcurrents Ch3                     |                         | 3            |                   | 31...<br>16   |                     |                                       |
| eFuse number of<br>overcurrents Ch4                     |                         | 4            |                   | 15...0        |                     |                                       |

Device status

|                        | Index<br>Hex.<br>(dec.) | Sub<br>index | Data type                       | Bit offset | Description/comment  |
|------------------------|-------------------------|--------------|---------------------------------|------------|--|
| Device status          | 0x24 (36)               | 0            | UINT8                           | 7...0      | 0: Device is operating properly<br>1: Maintenance-Required<br>2: Out-of-Specification<br>3: Functional-Check<br>4: Failure |
| Detailed Device Status | 0x25 (37)               | 0            | 3-Byte<br>string<br>(array [5]) | 120        | Shows up to 5 present events, access only via<br>sub index 0<br>3 bytes per sub index :                                    |
| Item [1]               |                         | 1            | 3-Byte<br>string                | 119...96   | Byte 1: Event Qualifier  |
| Item [2]               |                         | 2            |                                 | 95...72    | Byte 2, 3: Event code  |
| Item [3]               |                         | 3            |                                 | 71...48    |  |
| Item [4]               |                         | 4            |                                 | 27...24    |  |
| Item [5]               |                         | 5            |                                 | 23...0     |  |

## 9.5 IO-Link Events

The device sends the IO-Link events below to the IO-Link master.

| Event code | Event                                   | Event-type   | Description  |
|------------|---|--------------|--|
| 0x1800     | DC warning                              | Warning      | The output voltage has dropped more than 10 % below the value for the set output voltage.                                  |
| 0x1801     | Bonus Power                             | Notification | The output current is 5 % higher than the maximum value for longer than 3 s.   |
| 0x1802     | Overload                                | Warning      | The total output load is higher than permitted.  |
| 0x1803     | High voltage input                      | Warning      | The AC input voltage exceeds the operating range.  |
| 0x1804     | Low voltage input                       | Warning      | The AC input voltage is below the operating range.   |
| 0x1805     | Power supply down                       | Warning      | No internal connection from IO-Link transceiver to power supply  |
| 0x1806     | Predictive maintenance, power supply    | Warning      | The estimated remaining lifetime has reached 10 %. Performance of PSU might be limited due to aging effects of components. |
| 0x1809     | PSU setting changed via HMI             | Notification | Settings were changed via the man-machine interface of the PSU.  |
| 0x1825     | PSU hardware failure                    | Warning      | Critical PSU hardware failure detected. PSU shut down.   |
| 0x1830     | Converter 1, pre-alarm output current   | Warning      | The total output current of the converter has exceeded the pre-alarm level for more.                                       |
| 0x1840     | eFuse tripped ch1                       | Warning      | The eFuse for the channel has tripped due to overcurrent.  |
| 0x1841     | eFuse tripped ch 2                      | Warning      |  |
| 0x1842     | eFuse tripped ch 3                      | Warning      |  |
| 0x1843     | eFuse tripped ch 4                      | Warning      |  |
| 0x1850     | eFuse output current pre-alarm ch1      | Notification | The output current of the eFuse at the channel has exceeded the pre-alarm level for more than 2 s.                         |
| 0x1851     | eFuse output current pre-alarm ch2      | Notification |  |
| 0x1852     | eFuse output current pre-alarm ch3      | Notification |  |
| 0x1853     | eFuse output current pre-alarm ch4      | Notification |  |
| 0x4210     | Permissible device temperature exceeded | Warning      | The temperature in the device is too high.   |
| 0x6320     | Parameter error                         | Error        | The parameter settings of the device are invalid.  |

## 9.6 IO-Link error codes

| Error code | Description                                       |   |
|------------|---|---|
| 0x8000     | No details  | Application error in device<br>Service was denied by device, no detailed information available                    |
| 0x8011     | Index not available                               |   |
| 0x8012     | Sub index not available                           |   |
| 0x8020     | Service temporarily not available                 | No access to parameters possible, device does not allow access in current state                                   |
| 0x8021     | Service temporarily not available, local control  | No access to parameters possible, device in local operating mode, operation only via operator interface on device |
| 0x2022     | Service temporarily not available, device control | No access to parameters possible, device in remote operating mode, operation only via IO-Link                     |
| 0x8023     | Access denied                                     | Access denied, index not writable   |
| 0x8030     | Parameter value out of range                      |   |
| 0x8031     | Parameter value above limit                       |   |
| 0x8032     | Parameter value below limit                       |   |
| 0x8033     | Parameter length overrun                          | Length of data to be written does not match the length defined for this parameter.                                |
| 0x8034     | Parameter length underrun                         |   |
| 0x8035     | Function not available                            | Command not supported by the device   |
| 0x8036     | Function temporarily unavailable                  | Command not supported by the device   |
| 0x8040     | Interfering parameter                             | Invalid parameter set, a written single parameter value does not fit to other parameter settings                  |
| 0x8041     | Inconsistent parameter set                        | Parameters inconsistent, device plausibility check failed   |
| 0x8082     | Application not ready                             | Device not ready, access denied   |

## 10 Troubleshooting

If the device does not function as expected, first check whether ambient interference is present.  
If there is no ambient interference present, check the connections of the device for faults.

If there are no faults, there is a device malfunction. In this case, decommission the device and replace it with a new device of the same type.

## 11 Maintenance

- ▶ Clean the devices at regular intervals with a damp cloth.

## 12 Repair

The device is not intended for repair by the user. The device must be decommissioned if it is faulty. Observe our return acceptance conditions when returning the device to Turck.

### 12.1 Returning devices

If a device has to be returned, bear in mind that only devices with a decontamination declaration will be accepted. This is available for download at <https://www.turck.de/en/return-service-6079.php> and must be completely filled in, and affixed securely and weather-proof to the outside of the packaging.

## 13 Disposal







The devices must be disposed of properly and do not belong in the domestic waste.

## 14 Technical data

### 14.1 AC input

| Technical data             |  |
|----------------------------|--|
| AC input voltage           |  |
| ■ Nominal range            | 100...240 VAC -15 %, +10 %   |
| ■ Operating range AC input | 85...264 VAC, continuous operation<br>264...300 VAC, für max. 500 ms                                     |
| DC input voltage           |  |
| ■ Nominal range            | 110...300 VDC $\pm 20$ %<br>An external fuse is required for DC supply voltages above 150 VDC.           |
| External fuse              | B-6A, C-6A   |
| Internal fuse              | 4 separate eFuses  |
| Mains frequency            | 50...60 Hz $\pm 6$ %   |
| Turn-on voltage            | Typ. 80 VAC, steady-state end value,<br>s. fig.: Voltage range, input voltage AC                         |
| Turn-off voltage           | Typ. 70 VAC, steady-state end value,<br>s. fig.: Voltage range, input voltage AC                         |
| Switch-on delay            | Typ. 2 s, at 500 W, symmetrical phase voltages,<br>s. fig.: Switch-on behavior                           |
| Rise time                  | S. fig.: Switch-on behavior  |
|                            | at 300 W constant current load, 0 mF load:   |
|                            | ■ 100 VAC typ. 22 ms   |
|                            | ■ 120 VAC typ. 22 ms   |
|                            | ■ 230 VAC typ. 22 ms   |
|                            | at 300 W constant current load, 125 mF load:   |
|                            | ■ 100 VAC typ. 48 ms   |
|                            | ■ 120 VAC typ. 46 ms   |
|                            | ■ 230 VAC typ. 35 ms   |
| Turn-on overshoot          | max. 200 mV, s. fig.: Switch-on behavior   |
| Input current              | at 300 W, symmetrical phase voltages, s. fig.: Input current vs. output power (at 24 VDC output voltage) |
|                            | ■ 100 VAC Typ. 3.98 A  |
|                            | ■ 120 VAC Typ. 3.2 A   |
|                            | ■ 230 VAC Typ. 1.68 A  |
| Power factor               | S. fig.: Power factor vs. output power (at 24 VDC output voltage)  |
|                            | ■ 100 VAC typ. 0.99, at 360 W  |
|                            | ■ 120 VAC typ. 0.99, at 360 W  |
|                            | ■ 230 VAC typ. 0.97, at 360 W  |

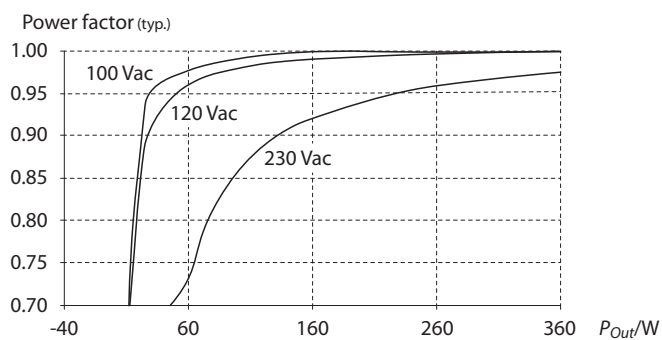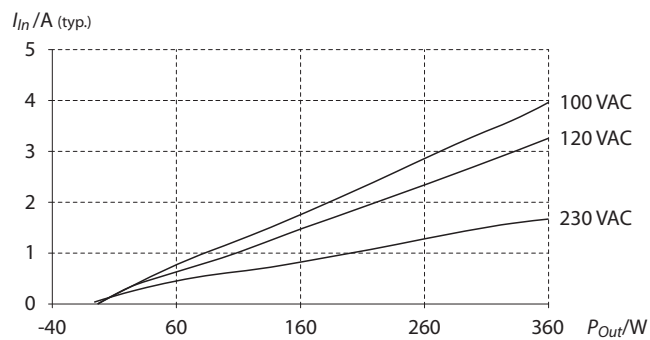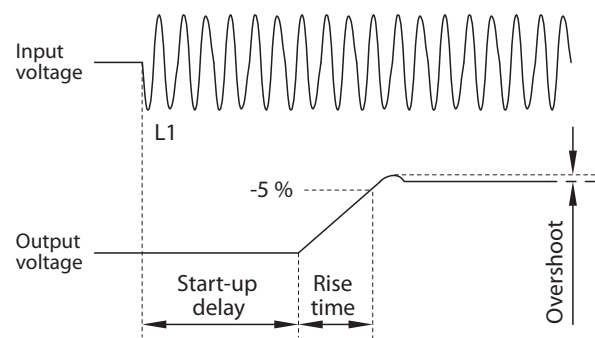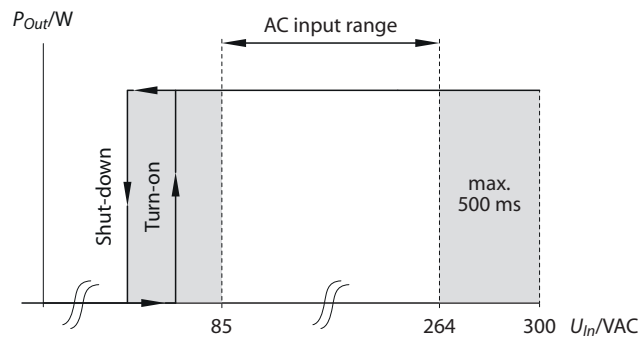

## 14.2 DC input

| Technical data             |                                 |             |
|----------------------------|---------------------------------|-------------|
| Input voltage              |                                 |             |
| ■ Nominal range            | 110... 300 VDC ±20 %            |             |
| ■ Operating range AC input | 88...360 VDC                    |             |
|                            |                                 |             |
| Technical data             |                                 |             |
| Input current              | ■ 110 VDC, 300 W                | Typ. 2.9 A  |
|                            | ■ 150 VDC, 300 W                | Typ. 1.04 A |
| Turn-on voltage            | Typ. 80 VDC, steady-state value |             |
| Turn-off voltage           | Typ. 70 VDC, steady-state value |             |

## 14.3 DC output

| Technical data  |   |  |
|---|---|--|
| Number of outputs   | 4   |  |
| Output voltage  |   |  |
| ■ Nominal   | 24 VDC  | Default-setting: 24.5 V  |
| ■ Adjustment range  | 24... 28 V  | Settable in steps: 24 V, 24,5 V, 25 V, 25.5 V, 26 V, 26.5 V, 27 V and 28 V |
| Factory setting   | Typ. 24.5 V, ± 0,2 %, at nominal load                         |  |
| Line regulation   | Max. 25 mV  | Linear voltage regulation at 85...300 VAC input voltage                    |
| Load regulation   | Typ. 250 mV   | 0...360 W output load, static value  |
| Ripple and noise voltage  | Max. 50 mV <sub>pp</sub>                                      | Bandwidth 20 Hz...20 Mhz, 50 Ω   |
| Output current  | Max. 10 A per output, s. fig.: Trip curve diagram (max. 10 A) |  |
| Output power 24...28 V, continuous at ambient temperature:  |   |  |
| ■ At 45 °C  | 360 W   |  |
| ■ At 55 °C  | 300 W   |  |
| ■ At 70 °C  | 150 W   |  |
| Linear derating between +45 °C and +70 °C, s. fig.: Derating output power vs. ambient temperature |   |  |
| Total output power, short-term, up to 5 s, at ambient temperature:                                |   |  |
| ■ Up to 55 °C   | 600 W   |  |
| ■ Up to 70 °C   | 300 W   |  |
| Internal output capacitance   | Typ. 12500 µF   | For all outputs in total   |
| Parallel use  | No  | Do not connect outputs or devices in parallel.                             |
| Back-feeding loads  | Max. 35 V/4 J   | For all outputs together, even when switched off                           |

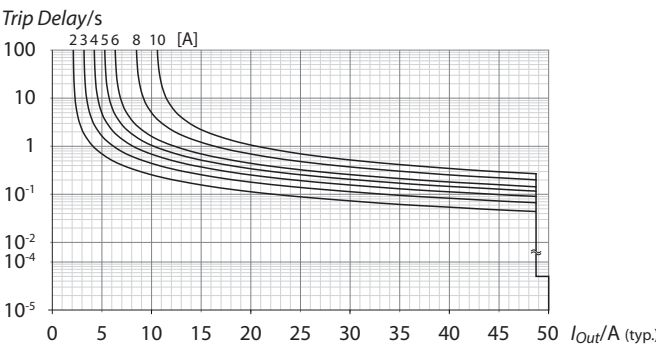


Fig. 16: Trip curve diagram (max. 10 A)

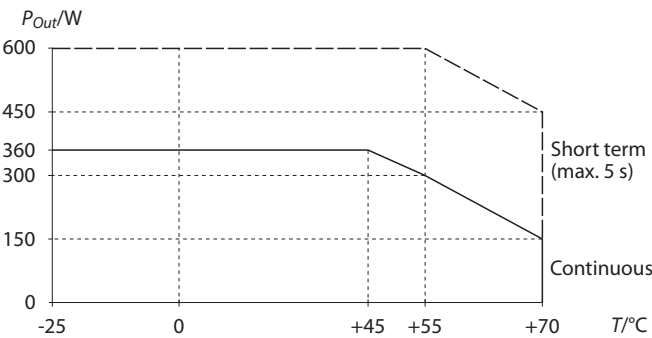


Fig. 17: Derating, output power vs. ambient temperature

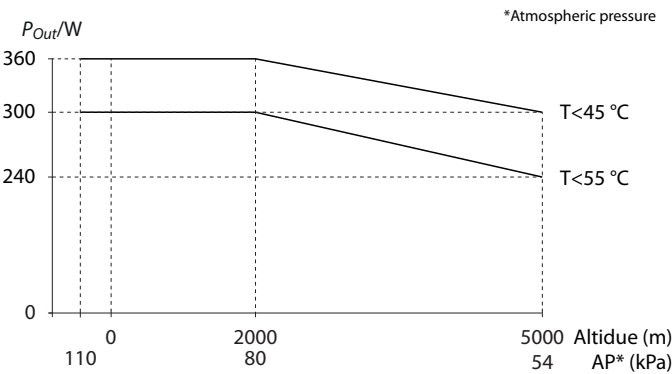


Fig. 18: Derating, output power vs. altitude

## 14.4 Efficiency and power losses

|              | 100 VAC     | 120 VAC     | 230 VAC     |                              |
|--------------|-------------|-------------|-------------|------------------------------|
| Efficiency   | Typ. 93.6 % | Typ. 94.3 % | Typ. 95.7 % | At 24 VDC, 3500 W            |
| Power losses | Typ. 2.7 W  | Typ. 2.8 W  | Typ. 2.28 W | At 24 VDC, 0 W (no load)     |
|              | Typ. 10.7 W | Typ. 10.0 W | Typ. 8.3 W  | At 24 VDC, 150 W (no load)   |
|              | Typ. 20.5 W | Typ. 18.2 W | Typ. 16.2 W | At 24 VDC, 300 W (full load) |

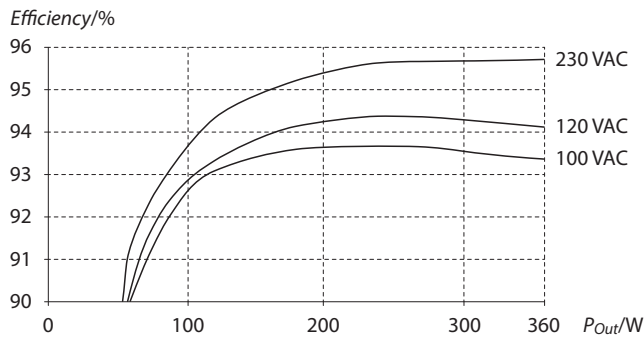


Fig. 19: Power factor vs. output power at 24 VDC (typ.)

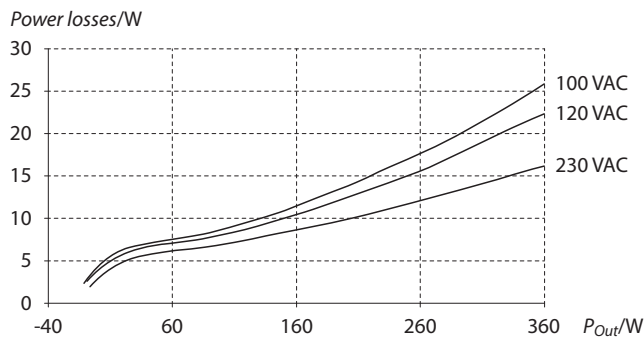


Fig. 20: Power losses vs. output power at 24 VDC (typ.)

## 14.5 IO-Link interface

| Technical data      |                                     |
|---------------------|-------------------------------------|
| Connector           | M12 male connector, 5-pole, A-coded |
| IO-Link version     | V1.1                                |
| Baud rate           | COM3 (230.4 kBaud)                  |
| Cycle Time          | 2 ms                                |
| SIO Mode            | Supported                           |
| Process data length | 23 byte                             |

## 14.6 General technical data

| Technical data   |  |  |
|--|--|--|
| EMC  | According to EN 61000-6-1, EN 61000-6-2, EN 61000-6-3, EN 61000-6-4, EN 61000-3-2 and EN 61000-3-3 |  |
| Ambient conditions   |  |  |
| Operating temperature  | -25°C...+70 °C<br>(-13°F...158 °F)   | Operational temperature is the same as the ambient or surrounding temperature and is defined as the air temperature 2 cm below the unit.   |
| Storage temperature  | -40°C...+85 °C<br>(-40°F...185 °F)   | For storage and transportation   |
| Output derating  | 6 W/°C   | Between +45 °C and +55 °C<br>(113 °F and 131 °F)   |
|  | 10 W/°C  | Between +55 °C and +70 °C<br>(131 °F and 140 °F)   |
|  | 20 W/1000 m or 5 °C/1000 m   | For altitudes >2000 m (6560 ft), see fig.: Output power vs. ambient temperature DC output  |
| The derating is not hardware controlled. Observe reduced current limits to avoid overloading the device. |  |  |
| Humidity   | 5...95 % r.h.  | According to IEC 60068-2-30  |
| Atmospheric pressure   | 54...110 kPa   | S. fig.: Output power vs. ambient temperature DC output  |
| Altitude   | Max. 5000 m<br>(16 400 ft)   | S. fig.: Output power vs. altitude DC output   |
| Overvoltage category   |  | According to IEC 60664-1   |
|  | III  | For TN, TT mains systems with earthed neutral and IT star mains systems with insulation monitoring for altitudes up to 2000 m  |
|  | II   | For TN, TT mains systems with earthed neutral and IT star mains systems with insulation monitoring for altitudes between 2000 m and 5000 m<br>For TN, TT, IT Delta mains systems or IT star mains systems without insulation monitoring for altitudes up to 2000 m |
| Degree of pollution  | 3  | According to IEC 62477-1, not conductive   |
| Vibration sinusoidal   | 2-17.8 Hz: ±1.6 mm;<br>17.8-500 Hz: 2g<br>2 hours per axis   | According to IEC 60068-2-6   |
| Shock  | 30 g 6 ms, 20 g: 11 ms<br>3 bumps per direction,<br>18 bumps in total                              | According to IEC 60068-2-27  |
| LABS compatibility   | Yes  |  |

#### Technical data

Audible noise                      Some audible noise may be emitted from the power supply during no load, overload or short circuit.

#### Safety and protection features

Isolation resistance

|                   |             |                                     |
|-------------------|-------------|-------------------------------------|
| ■ Input to output | Min. 500 MΩ | As delivered, measured with 500 VDC |
| ■ Input to PE     |             |                                     |

|               |            |  |
|---------------|------------|--|
| PE resistance | Max. 0.1 Ω | Resistance between PE terminal and the housing |
|---------------|------------|--|

|                         |      |   |
|-------------------------|------|---|
| Input/output separation | PELV | IEC/EN/UL 61010-2-201, IEC/EN 62368-1, IEC/EN 60950-1 |
|-------------------------|------|---|

|                                |                                |  |
|--------------------------------|--------------------------------|--|
| Output over-voltage protection | Typ. 31.8 VDC<br>Max. 32.5 VDC | In case of an internal defect, a redundant circuit limits the maximum output voltage. The output shuts down and automatically attempts to restart. |
|--------------------------------|--------------------------------|--|

|                  |  |  |
|------------------|--|--|
| Protection class |  | According to IEC 61140, PE connection required |
|------------------|--|--|

|                      |           |                           |
|----------------------|-----------|---------------------------|
| Degree of protection | IP65/IP67 | According to EN/IEC 60529 |
|----------------------|-----------|---------------------------|

|                            |               |  |
|----------------------------|---------------|--|
| Overtemperature protection | Yes, internal | Output shut down with automatic restart. |
|----------------------------|---------------|--|

|                            |                               |  |
|----------------------------|-------------------------------|--|
| Input transient protection | MOV<br>(Metal Oxide Varistor) |  |
|----------------------------|-------------------------------|--|

|                     |  |   |
|---------------------|--|---|
| Internal input fuse |  | Not user replaceable, slow-blow high-breaking capacity fuse |
|---------------------|--|---|

|                                    |              |                   |
|------------------------------------|--------------|-------------------|
| Touch current<br>(leakage current) | Max. 0.51 mA | At 264 VDC, 60 Hz |
|------------------------------------|--------------|-------------------|

|            |              |  |
|------------|--------------|--|
| Installing | 4 × M4 screw | Standard orientation: vertical, connection level downwards with two screws each at the upper and lower mounting holes, derating s. fig.: Derating, standard mounting orientation<br>Other mounting orientations: max. output power 300 W |
|------------|--------------|--|

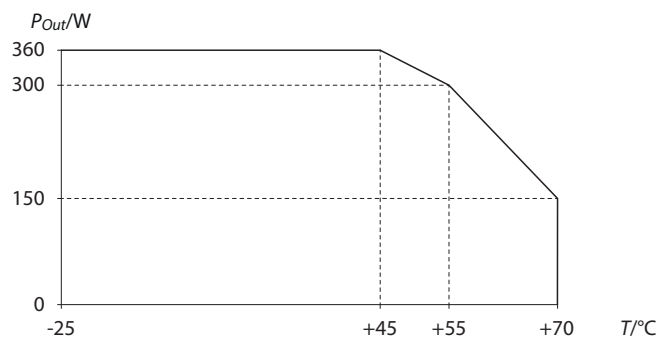


Fig. 21: Derating, standard mounting orientation

## 15 Turck branches — contact data

|                       |   |
|-----------------------|---|
| <b>Germany</b>        | Hans Turck GmbH & Co. KG<br>Witzlebenstraße 7, 45472 Mülheim an der Ruhr<br><a href="http://www.turck.de">www.turck.de</a>  |
| <b>Australia</b>      | Turck Australia Pty Ltd<br>Building 4, 19-25 Duerdin Street, Notting Hill, 3168 Victoria<br><a href="http://www.turck.com.au">www.turck.com.au</a>  |
| <b>Austria</b>        | Turck GmbH<br>Graumannsgasse 7/A5-1, A-1150 Vienna<br><a href="http://www.turck.at">www.turck.at</a>  |
| <b>Belgium</b>        | TURCK MULTIPROX<br>Lion d'Orweg 12, B-9300 Aalst<br><a href="http://www.multiprox.be">www.multiprox.be</a>  |
| <b>Brazil</b>         | Turck do Brasil Automação Ltda.<br>Rua Anjo Custódio Nr. 42, Jardim Anália Franco, CEP 03358-040 São Paulo<br><a href="http://www.turck.com.br">www.turck.com.br</a>  |
| <b>Canada</b>         | Turck Canada Inc.<br>140 Duffield Drive, CDN-Markham, Ontario L6G 1B5<br><a href="http://www.turck.ca">www.turck.ca</a>   |
| <b>China</b>          | Turck (Tianjin) Sensor Co. Ltd.<br>18,4th Xinghuazhi Road, Xiqing Economic Development Area, 300381 Tianjin<br><a href="http://www.turck.com.cn">www.turck.com.cn</a>   |
| <b>Czech Republic</b> | TURCK s.r.o.<br>Na Brně 2065, CZ-500 06 Hradec Králové<br><a href="http://www.turck.cz">www.turck.cz</a>  |
| <b>France</b>         | TURCK BANNER S.A.S.<br>11 rue de Courtalin Bat C, Magny Le Hongre, F-77703 MARNE LA VALLEE Cedex 4<br><a href="http://www.turckbanner.fr">www.turckbanner.fr</a>  |
| <b>Hungary</b>        | TURCK Hungary kft.<br>Árpád fejedelem útja 26-28., Óbuda Gate, 2. em., H-1023 Budapest<br><a href="http://www.turck.hu">www.turck.hu</a>  |
| <b>India</b>          | TURCK India Automation Pvt. Ltd.<br>401-403 Aurum Avenue, Survey. No 109 /4, Near Cummins Complex, Baner-Balewadi Link Rd., 411045 Pune - Maharashtra<br><a href="http://www.turck.co.in">www.turck.co.in</a> |
| <b>Italy</b>          | TURCK BANNER S.R.L.<br>Via San Domenico 5, IT-20008 Bareggio (MI)<br><a href="http://www.turckbanner.it">www.turckbanner.it</a>   |
| <b>Japan</b>          | TURCK Japan Corporation<br>ISM Akihabara 1F, 1-24-2, Taito, Taito-ku, 110-0016 Tokyo<br><a href="http://www.turck.jp">www.turck.jp</a>  |

|                       |  |
|-----------------------|--|
| <b>Korea</b>          | Turck Korea Co, Ltd.<br>A605, 43, Iljik-ro, Gwangmyeong-si<br>14353 Gyeonggi-do<br><a href="http://www.turck.kr">www.turck.kr</a>  |
| <b>Malaysia</b>       | Turck Banner Malaysia Sdn Bhd<br>Unit A-23A-08, Tower A, Pinnacle Petaling Jaya, Jalan Utara C,<br>46200 Petaling Jaya Selangor<br><a href="http://www.turckbanner.my">www.turckbanner.my</a>    |
| <b>Mexico</b>         | Turck Comercial, S. de RL de CV<br>Blvd. Campestre No. 100, Parque Industrial SERVER, C.P. 25350 Arteaga,<br>Coahuila<br><a href="http://www.turck.com.mx">www.turck.com.mx</a>                  |
| <b>Netherlands</b>    | Turck B. V.<br>Ruiterlaan 7, NL-8019 BN Zwolle<br><a href="http://www.turck.nl">www.turck.nl</a>   |
| <b>Poland</b>         | TURCK sp.z.o.o.<br>Wroclawska 115, PL-45-836 Opole<br><a href="http://www.turck.pl">www.turck.pl</a>   |
| <b>Romania</b>        | Turck Automation Romania SRL<br>Str. Siriului nr. 6-8, Sector 1, RO-014354 Bucuresti<br><a href="http://www.turck.ro">www.turck.ro</a>   |
| <b>Sweden</b>         | Turck AB<br>Fabriksstråket 9, 433 76 Jonsered<br><a href="http://www.turck.se">www.turck.se</a>  |
| <b>Singapore</b>      | TURCK BANNER Singapore Pte. Ltd.<br>25 International Business Park, #04-75/77 (West Wing) German Centre,<br>609916 Singapore<br><a href="http://www.turckbanner.sg">www.turckbanner.sg</a>       |
| <b>South Africa</b>   | Turck Banner (Pty) Ltd<br>Boeing Road East, Bedfordview, ZA-2007 Johannesburg<br><a href="http://www.turckbanner.co.za">www.turckbanner.co.za</a>  |
| <b>Turkey</b>         | Turck Otomasyon Ticaret Limited Sirketi<br>Inönü mah. Kayisdagi c., Yesil Konak Evleri No: 178, A Blok D:4,<br>34755 Kadiköy/ Istanbul<br><a href="http://www.turck.com.tr">www.turck.com.tr</a> |
| <b>United Kingdom</b> | TURCK BANNER LIMITED<br>Blenheim House, Hurricane Way, GB-SS11 8YT Wickford, Essex<br><a href="http://www.turckbanner.co.uk">www.turckbanner.co.uk</a>   |
| <b>USA</b>            | Turck Inc.<br>3000 Campus Drive, USA-MN 55441 Minneapolis<br><a href="http://www.turck.us">www.turck.us</a>  |

# TURCK

Your Global Automation Partner

Over 30 subsidiaries and  
60 representations worldwide!

100049091 | 2025/03



[www.turck.com](http://www.turck.com)